


- NOTES**
1. ■ FOR UNSPECIFIED VALUES OR TYPES SEE PARTS LIST.
 2. THE NUMBERS SHOWN IN BOXES (e.g. 2) ARE THE COMPONENT PREFIX NUMBERS AND SHOULD BE USED WHEN REFERENCE IS MADE TO ANY COMPONENT ON THAT PCB ASSY. ANY COMPONENT NOT ON A PCB ASSY, PREFIX 2 SHOULD BE USED.
 3. ALL COMPONENTS SHOWN WITH Δ ARE SURFACE MOUNTED, ALL OTHERS ARE LEADED.
 4. † FITTED FOR TEST PURPOSES ONLY.

OVER TEMP ALARM
TEMP SHUTDOWN ALARM

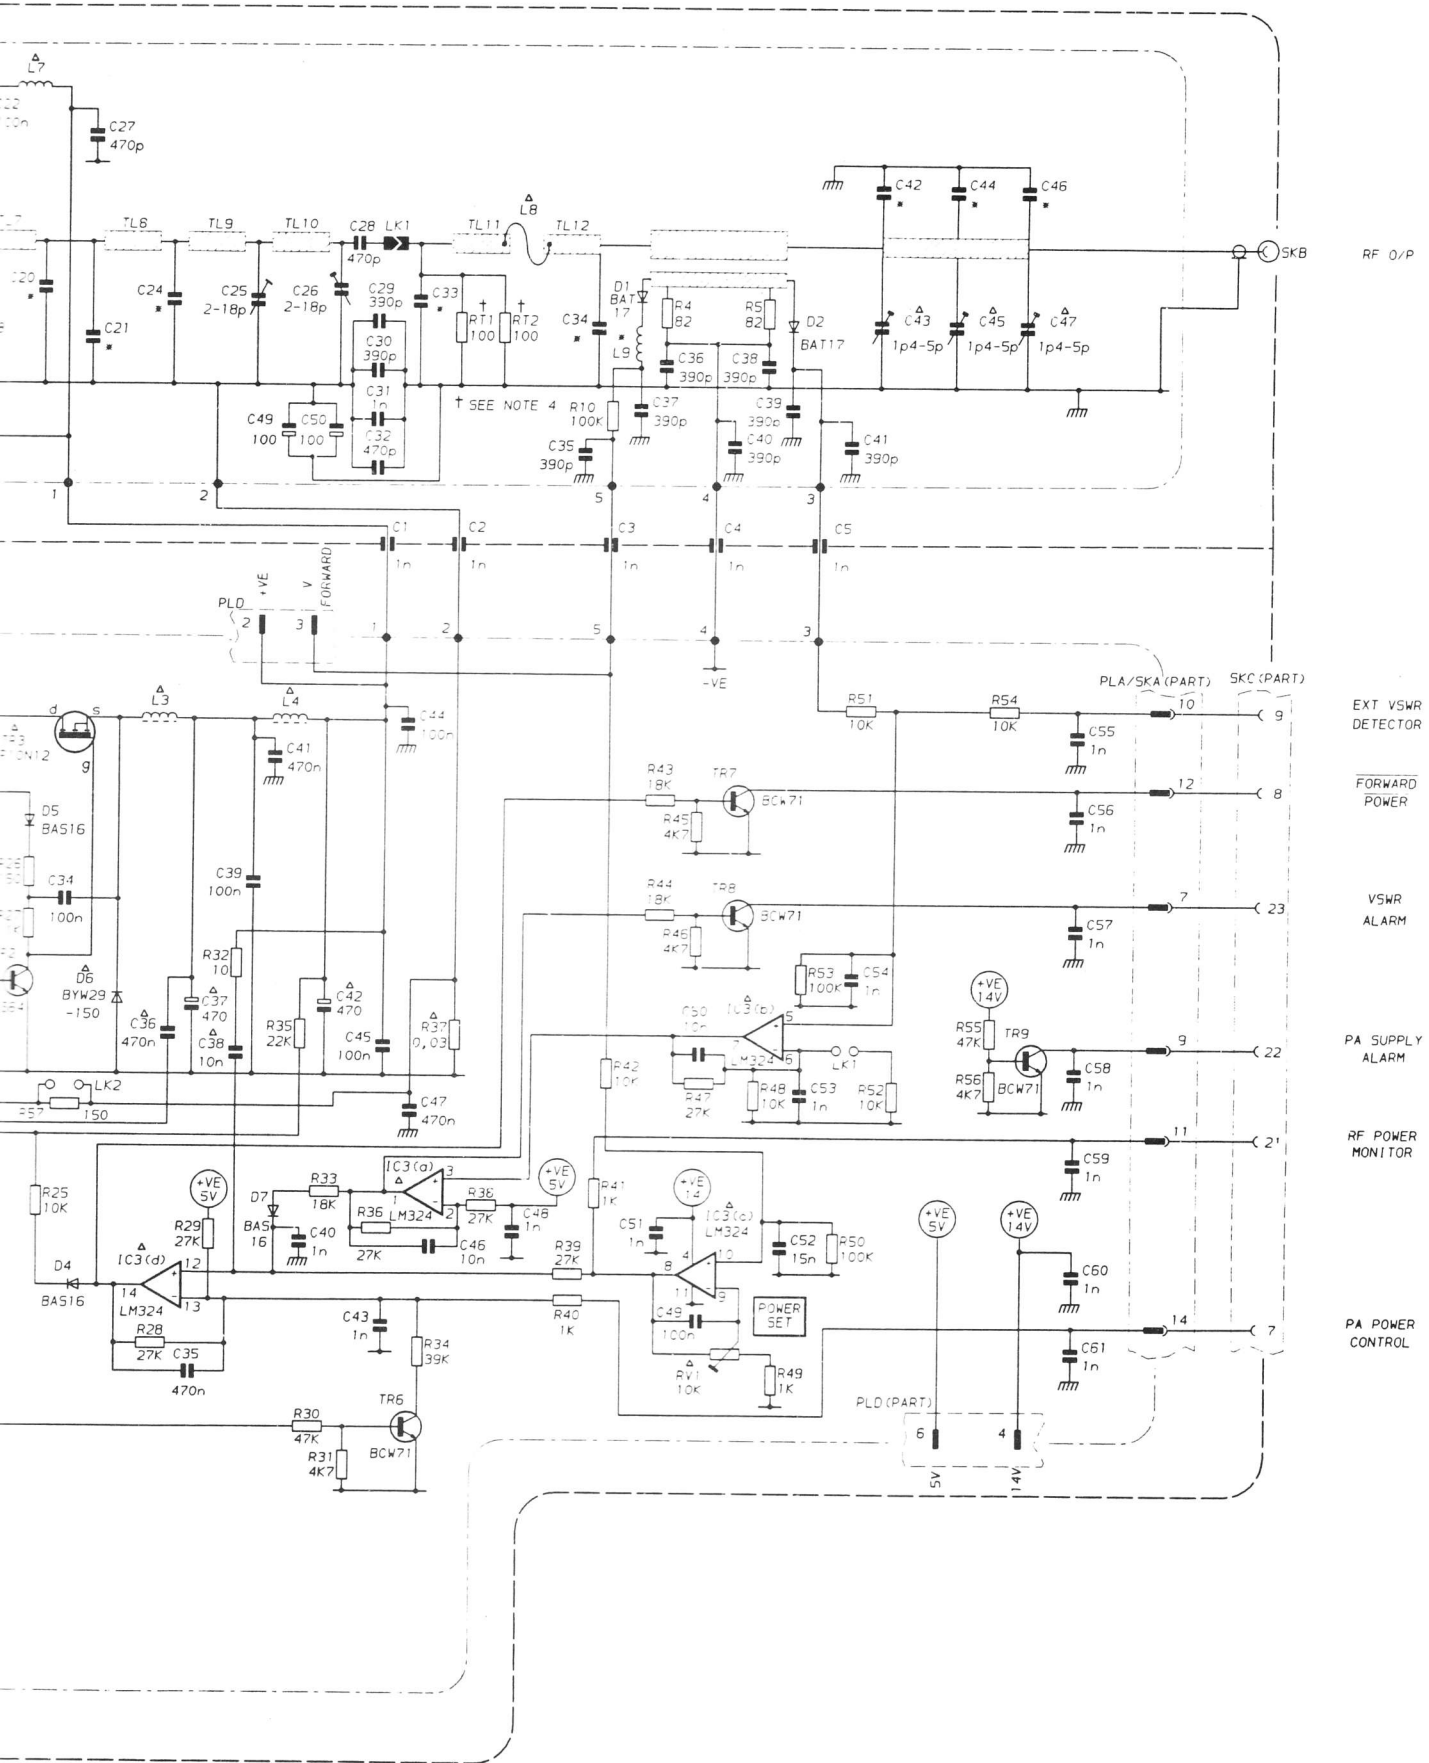

TX PA ATO4882/-
CIRCUIT DIAGRAM